

BugDorm-2E400 Insect Tent [BD2E400]

MegaView Science Co., Ltd.

https://shop.bugdorm.com · https://megaview.com.tw



Package Contents

- x1 Fabric Tent Body
- x8 Short Rods
- x12 Long Rods (2 spares)
- x8 Two-way Joints
- x4 Ridged Two-way Joints
- x4 Three-way Joints

Assembly

- 1. Connect two short rods with one ridged two-way joint to form four longer rods.
- 2. Thread one rod from Step 1 into each of the four sleeves on the base.
- 3. Use three-way joints to complete the base frame.
- 4. Thread one long pole through each of the four lower sleeves and into the top of each three-way joint in Step 3.
- 5. Push a two-way joint into the top of each pole used in Step 4.
- 6. Thread one long pole through each of the four upper sleeves and into the top half of each two-way joint used in Step 5.
- 7. Push a two-way joint into the top of each pole used in Step 6.
- 8. Thread the remaining two rods through tabs on top of the tent to form an X.
- 9. Push the ends of these two rods into the top half of each joint used in Step 6 to erect the tent. Make sure rod ends are fully seated in the joints.
- 10. Tie ribbons around crossed rods on top of the tent in Step 9.

Note

- * Operating Temperature: -10 to 60°C
- * The soft plastic floor is not waterproof.
- * Tent fabric is not UV treated. Avoid long-term exposure to direct sunlight.

CLEANING HAND WASH: Submerge and soak the tent for 20-30 minutes in the mix of detergent and water, agitate the tent gently, and then rinse the tent to remove the detergent.

MACHINE WASH: Use the side-loading laundry machine set on a washing cycle of low agitation and low-speed spin. CAUTION: Wash tent body only. Wash at room temperature. Use laundry bag when machine wash. Recommend applying neutral detergents. Apply bleach or stain remover with care, as those chemicals will weaken the tent fabric. Dry the tent in the shade.

